

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
UMS		Generator, complete	
UMS		Cap, distributor	
UMS	11561970	SPEEDO. CASING, (53-1/2") domestic	all 36
UMS	11852000	SWITCH ASSY., (431L) (Less lock & key)	P/8 35-36, P/6 35-36
UMS	11858201	COIL, Less switch (539L)	P/6 35-36, P/6 35-36
UMS	1431N-2DJ	SHOCK ABSORBER, Complete right rear	P/6B 35 (<chassis #7453),
UMS	1431P-2DJ	SHOCK ABSORBER, Complete left rear	P/6B 35 (<chassis #7453),
UMS	1434A-3DJ	SHOCK ABSORBER, Complete right rear	P/6A, P/8 36
UMS	1434B-3DJ	SHOCK ABSORBER, Complete left rear	P/6A, P/8 36
UMS	1438J-2DJ	SHOCK ABSORBER, Complete-right front	P/6B 35-36
UMS	1438K-2DJ	SHOCK ABSORBER, Complete left front	P/6B 35-36
UMS	1439A-2DJ	SHOCK ABSORBER, Complete right rear	P/6B 35 (>chassis #7453),
UMS	1439B-2DJ	SHOCK ABSORBER, Complete left rear	P/6B 35 (>chassis #7453),
UMS	1505451	OIL GAUGE	all 36
UMS	1505635	CASE, All gauges	all 36
UMS	1510169	THERMO GAUGE	all 36
UMS	1560347	SPEEDO. CABLE (54-1/4") domestic	P/8 34-35-36, P/6 35-36
UMS	1560347	Speedometer Cable	P/8 34-35-36, P/6 35-36
UMS	1560679	SPEEDOMETER HEAD COMPLETE	all 36
UMS	1561860	BEZEL, All gauges	all 36
UMS	1561864	GLASS, all gauges	all 36
UMS	1861356	BENDIX DRIVE	P/6 36
UMS	3206	BEARING, Transmission rear (Pontiac #903206)	all 36
	4065851	Molding, Windshield Division (outer)	Convertible
	4065858	Molding, Windshield Garnish middle	Convertible
	4065859	Molding, Windshield Division (inner)	Convertible
	4066129	Molding, Windshield Garnish upper right	Convertible
	4066130	Molding, Windshield Garnish upper left	Convertible
	4066798	Weathersrip, Front Roof Rail to Windshield	Convertible
UMS	47507	BEARING, Transmission front (Pontiac #954144)	all 36
UMS	5557	VOLTAGE CONTROL UNIT COMPLETE	P/8 1935-16, P/6 36
UMS	647-B	DISTRIBUTOR, Ignition (1861861)	P/6 36
UMS	727-Y	STARING MOTOR, Complete (1861125)	P/6 36 (LHD)
UMS	820052	SWITCH, Starting	P/6 35-36 (LHD)

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
UMS	820153	STARTER MOTOR FIELD COIL- Upper	P/6 35-36 (LHD)
UMS	820154	STARTER MOTOR FIELD COIL- Lower	P/6 35-36 (LHD)
UMS	857810	AMMETER, Generator telltale	all 36
UMS	865083	COVER, Air cleaner	P/6 35-36
UMS	865092	PAD, Air cleaner felt	P/6 35-36
UMS	K-1601	HORN, Complete, Klaxon 26-L (standard)	all 35-36
0.004	497484	PLATE, Cylinder front end	P/8 35-36, P/6 35-36
0.004	497486	SUPPORT, Cylinder front end plate	P/8 35-36, P/6 35-36
0.005	495169	GASKET, Cylinder front end plate	P/8 33-34-35-36, P/6 35-36
0.008	499292	BRACKET, Engine intermediate support R.H.	P/6 36
0.008	499293	BRACKET, Engine intermediate support L.H.	P/6 36
0.027	496941	INSULATOR ASSY., Engine rear support	P/8 35-36, P/6 35-36
0.027	496941	INSULATOR, Engine intermediate support	P/6 35-36
0.027	496942	PILOT, Eng. rear sppt. brkt. (to rear brg. ret.)	P/6 36
0.027	497628	INSULATOR ASSY., Engine front support	P/8 35-36, P/6 35-36
0.027	499296	INSULATOR, Engine intermediate support	P/6 36
0.029	497645	REINFORCEMENT, Engine rear support cross member	P/8 35-36, P/6 35-36
0.033	103877	PLUG, Sq. Hd. pipe (1/8") oil filter and camshaft brg. hole	P/8 32-32-34-35-36, P/6
0.033	114941	PLUG, Expansion (2-1/8")	P/8 33-34-35-36, P/6 35-36
0.033	116566	PLUG, Headless Sq. hole pipe (1/2") cyl. block oil gallery	P/8 33-34-35-36, P/6 35-36
0.033	141275	PIN, Dowel (1/2" x 1/2") Cyl. block bottom flange oil hole	P/8 33-34-35-36, P/6 35-36
0.033	141566	COCK, Drain (1/8") cylinder block	1924 up all models.
0.033	494516	PLATE, Intermediate support bracket tapping	P/8 33-35-36, P/6 35-36
0.033	549656	BLOCK, Cylinder (fitted with pistons and pins)	P/6 36
0.060	497698	RETAINER, Crankshaft rear bearing cap screw	P/8 35-36, P/6 35-36
0.096	499385	BEARING, Crankshaft front Std.	P/6 35-36
0.096	499387	BEARING, Crankshaft front (.001")	P/6 35-36
0.099	498838	BEARING, Crankshaft front center (Std)	P/6 35-36
0.099	499390	BEARING, Crankshaft front center (.001")	P/6 35-36
0.103	498839	BEARING, Crankshaft rear center (Std)	P/6 35-36
0.103	499391	BEARING, Crankshaft rear center (.001")	P/6 35-36
0.106	103891	PLUG, Crankshaft rear bearing expansion	P/8 36, P/6 36
0.106	499386	BEARING, Crankshaft rear (Std)	P/6 35-36
0.106	499388	BEARING, Crankshaft rear (.001")	P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
0.137	494663	SEAL, Crankshaft rear bearing cap oil	P/8 36, P/6 36
0.206	494913	COVER, Timing sprocket	P/8 33-34-35-36, P/6 35-36
0.207	494914	GASKET, Timing sprocket cover	P/8 33-34-35-36, P/6 35-36
0.219	494915	BAR, Timing sprocket cover	P/8 33-34-35-36, P/6 35-36
0.239	497280	CRANK, starting	P/8 35-36, P/6 35-36
0.245	497186	COVER, Starting crank hole	P/8 35-36, P/6 35-36
0.269	498501	HEAD, Cylinder (6.2 ratio)	P/6 36
0.277	495742	FITTING, Heat indicator to motor	P/8 33-34-35-36, P/6 35-36
0.283	495462	GUIDE, Intake valve	P/8 33-34-35-36, P/6 35-36
0.286	494876	GUIDE, Exhaust valve	P/8 33-34-35-36, P/6 35-36
0.289	498243	GASKET, Cylinder head (Std)	P/6 35-36
0.296	497091	VALVE, Exhaust	P/6 35-36
0.296	497092	VALVE, Intake	P/6 35-36
0.303	495096	SPRING, Valve	P/8 33-34-35-36, P/6 35-36
0.308	526795	CAGE, Valve spring	P/8 33 to 36, P/6 28 to 32,
0.309	836117	CUP, Valve spring	P/8 33-34-35-36, P/6 35-36
0.310	836120	KEY, Valve spring cup	P/8 33-34-35-36, P/6 35-36
0.439	497537	COVER, Engine valve front	P/6 35-36
0.439	498754	COVER, Engine valve rear	P/6 36
0.443	497544	GASKET, Engine valve cover	P/6 35-36
0.459	405632	LIFTER AND ADJ. SCREW, Valve (Std)	P/8 33-34-35-36, P/6 35-36
0.459	405632	LIFTER AND ADJ. SCREW, Valve (.005" oversize)	P/8 33-34-35-36, P/6 35-36
0.519	497090	CAMSHAFT	P/6 35-36
0.529	495168	SPACER, Camshaft sprocket	P/6 35-36
0.533	495166	PLATE, Camshaft thrust	P/8 33-34-35-36, P/6 35-36
0.539	494877	BEARING, Camshaft front	P/8 33-34-35-36, P/6 35-36
0.543	494878	BEARING, Camshaft front center	P/8 33-34-35-36, P/6 35-36
0.549	494880	BEARING, camshaft rear	P/6 35-36
0.603	498812	ROD ASSY., Connecting (less brgs.)	P/6 36
0.613	497067	BUSHING, Piston pin	P/6 35-36
0.616	499136	BEARING, Conn. Rod (Std.)	P/6 36
0.616	499343	BEARING, Conn. Rod (.001")	P/6 35-36
0.629	549634	PISTON AND PIN (Std. 3.372)	P/6 36
0.629	549635	PISTON AND PIN (Std. 3.373)	P/6 36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
0.629	549636	PISTON AND PIN (Std. 3.374)	P/6 36
0.629	549637	PISTON AND PIN (.01." oversize)	P/6 36
0.629	549638	PISTON AND PIN (.020" oversize)	P/6 36
0.629	549639	PISTON AND PIN (.030" oversize)	P/6 36
0.636	497068	PIN, Piston (Std.)	P/6 35-36
0.636	497499	PIN, Piston (.001')	P/6 35-36
0.636	497500	PIN, Piston (.003')	P/6 35-36
0.636	497501	PIN, Piston (.005')	P/6 35-36
0.639	487461	SCREW, Piston pin set	P/8 33-34-35-36, P/6 35-36
0.643	497070	RING, Piston Std. (oil)	P/6 35-36
0.643	497509	RING, Piston .005" oversize (oil)	P/6 35-36
0.643	497510	RING, Piston .010" oversize (oil)	P/6 35-36
0.643	497511	RING, Piston .015" oversize (oil)	P/6 35-36
0.643	497512	RING, Piston .020" oversize (oil)	P/6 35-36
0.643	497513	RING, Piston .030" oversize (oil)	P/6 35-36
0.643	498811	RING, Piston Std. (compression)	P/6 35-36
0.643	499070	RING, Piston .010" oversize (compression)	P/6 35-36
0.643	499072	RING, Piston .020" oversize (compression)	P/6 35-36
0.643	499073	RING, Piston .030" oversize (compression)	P/6 35-36
0.646	497059	CRANKSHAFT ASSY.	P/6 35-36
0.650	836713	RETAINER, Clutch pilot bearing	P/8 35-36, P/6 35-36
0.659	497057	BALANCER ASSY., Harmonic (includes pulley)	P/6 35-36
0.666	497060	FLYWHEEL	P/8 35-36, P/6 35-36
0.673	496968	GEAR, Flywheel ring	P/8 35-36, P/6 35-36
0.679	496470	COVER, Clutch housing front	P/8 35-36, P/6 35-36
0.679	499143	COVER, Clutch housing bottom	P/8 35-36, P/6 35-36
0.683	498577	HOUSING, Clutch (L.H.D.)	P/8 36, P/6 36
0.724	497704	CHAIN, Timing	P/6 35-36
0.728	497702	SPROCKET, Crankshaft	P/6 35-36
0.729	495152	KEY, Crankshaft sprocket and pulley	P/8 33-34-35-36, P/6 35-36
0.736	497703	SPROCKET, Camshaft	P/6 35-36
0.742	495167	RETAINER, Camshaft sprocket nut	P/8 33-34-35-36, P/6 35-36
0.759	492085	SEAL, Timing sprocket cover oil	P/8 33-34-35-36, P/6 35-36
0.795	498454	FORK, Clutch release	P/8 33-34-35-36, P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
0.797	495428	BOOT, Clutch yoke	P/8 33-34-35-36, P/6 35-36
0.800	497087	PLATE, Clutch release bearing	P/8 35-36, P/6 35-36
0.802	498585	COLLAR AND BEARING, Clutch release (L.H.D.)	P/6 36
0.805	837972	SPRING, Clutch fork	P/8 36, P/6 36
0.815	113702	OILER, Clutch release bearing hinge lid	P/8 34-35-36, P/6 35-36
0.830	497264	PEDAL, Clutch (L.H.D.)	P/8 35-36, P/6 35-36
0.831	527030	BUSHING, Clutch pedal (L.H.D.)	P/8 33 to 36, P/6 35-36
0.833	497378	SHAFT, Clutch pedal (L.H.D.)	P/8 35-36, P/6 35-36
0.839	497261	LINK, Clutch pedal adjusting (L.H.D.)	P/8 35-36, P/6 35-36
0.844	496451	SPRING, Clutch pedal return	P/8 34-35-36, P/6 35-36
0.845	499291	ANCHOR, Clutch pedal return spring	P/6 36
0.849	368246	PIN, Clutch pedal return spring	P/8 33-34-35-36, P/6 35-36
0.850	499148	PIN, Clutch countershaft lever (L.H.D.)	P/8 36, P/6 36
0.851	497256	BEARING, Clutch control countershaft L.H.D.	P/8 35-36, P/6 35-36
0.851	499161	SPRING, Clutch countershaft anti-rattle (L.H.D.)	P/8 36, P/6 36
0.852	497269	SUPPORT, Clutch countershaft frame L.H.D.	P/8 35-36, P/6 35-36
0.852	497271	SUPPORT, Clutch countershaft engine L.H.D.	P/8 35-36, P/6 35-36
0.852	499149	SHAFT, Clutch control counter L.H.D.	P/8 35-36, P/6 35-36
0.853	497266	RETAINER, Clutch countershaft lock L.H.D.	P/8 35-36, P/6 35-36
0.859	497077	COVER AND PRESSURE PLATE ASSY., Clutch	P/8 35-36, P/6 35-36
0.861	497079	COVER, Clutch	P/8 35-36, P/6 35-36
0.863	497088	PLATE, Clutch pressure	P/8 35-36, P/6 35-36
0.865	493679	SPRING, Clutch pressure	P/8 35-36, P/6 35-36
0.874	497082	LEVER, Clutch release	P/8 35-36, P/6 35-36
0.875	497083	TRUNNION, Clutch release lever	P/8 35-36, P/6 35-36
0.878	497086	SPRING, Clutch release lever	P/8 35-36, P/6 35-36
0.886	142655	BEARING, Clutch pilot	P/8 35-36, P/6 35-36
0.901	544321	FACINGS, Clutch (set of two w/rivets)	P/8 36, P/6 36
0.910	836571	COVER, Clutch inspection	P/8 33-34-35-36, P/6 35-36
1.003		Water pump	P/8 34-35-36, P/6 35-36
1.003	496433	SHAFT ASSY., Water pump	P/8 34-35-36, P/6 35-36
1.073	494950	BODY, Water pump	P/8 33-34-35-36, P/6 35-36
1.074	498009	BUSHING, Water pump front	P/8 33-34-35-36, P/6 35-36
1.074	498010	BUSHING, Water pump rear	P/8 33-34-35-36, P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
1.083	497971	OILER, (Hinge lid) Water pump bushing (3/8")	P/8 35-36, P/6 35-36
1.109	494954	IMPELLER, Water pump	P/8 33-34-35-36, P/6 35-36
1.113	494957	PLATE, Water pump body	P/8 33-34-35-36, P/6 35-36
1.114	494956	GASKET, Water pump to body plate	P/8 33-34-35-36, P/6 35-36
1.133	495581	PACKING, Water pump	P/8 33-34-35-36, P/6 35-36
1.135	497010	TUBE ASSY., Water inlet (inside cylinder block)	P/6 35-36
1.153	494903	ELBOW, Water outlet	P/8 33-34-35-36, P/6 35-36
1.154	494904	GASKET, Water outlet elbow	P/8 33-34-35-36, P/6 35-36
1.159	495192	HOSE, Radiator inlet (1-1/2" x 9-3/4")	P/8 33-34-35-36, P/6 35-36
1.203	497778	CAP, Radiator filler	P/8 35, P/6 35-36
1.219	3106662	CORE, Radiator	P/6 36
1.219	498428	BAFFLE PLATE, Radiator (lower)	P/8 35-36, P/6 35-36
1.219	498949	BAFFLE, Radiator Core (upper)	P/8 36, P/6 36
1.229	141566	COCK, Radiator overflow (1/8" angle)	1931 up, all models
1.240	496078	HOSE, Radiator drain	P/8 35-36, P/6 35-36
1.246	3099450	THERMOSTAT, Water manifold	P/8 33-34-35-36, P/6 35-36
1.246	3099895	THERMOSTAT, Water manifold (high opening)	P/8 33-34-35-36, P/6 35-36
1.251	494906	RETAINER, Thermostat	P/8 33-34-35-36, P/6 35-36
1.263	499094	SHELL, Radiator	P/8 36, P/6 36
1.265	498708	ORNAMENT, Radiator	P/6 36
1.266	498861	GRILLE, Radiator center	P/8 36, P/6 36
1.266	498906	GUIDE, Radiator (center grille)	P/8 36, P/6 36
1.266	498937	GRILLE, Radiator R.H. Side	P/8 36, P/6 36
1.266	498938	GRILLE, Radiator L.H. Side	P/8 36, P/6 36
1.268	499081	REINFORCEMENT, Radiator and Headlamp	P/8 36, P/6 36
1.270	499404	REINFORCEMENT, Radiator shell (front)	P/8 36, P/6 36
1.273	498859	CLIP, Radiator center grille	P/8 36, P/6 36
1.303	498964	PLATE, Radiator center grille name	P/6 36
1.309	499249	ROD, Radiator tie	P/6 36
1.314	497723	PLATE, Radiator tie rod clamp	P/8 35-36, P/6 35-36
1.314	497724	BOLT, Radiator tie rod clamp "U"	P/8 35-36, P/6 35-36
1.359	496021	FAN ASSY., 4 blade	P/8 36, P/6 35-36
1.406	495053	PULLEY, Water pump and fan	P/8 33-34-35-36, P/6 35-36
1.416	494967	BELT, Fan (approximate length 19-3/4")	P/8 33-34-35-36, P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
1.426	497120	PAN, Oil	P/6 35-36
1.429		Engine Gasket Set	6 cyl
1.429	497118	GASKET, Oil pan (R.H.)	P/6 35-36
1.429	497119	GASKET, Oil pan (L.H.)	P/6 35-36
1.432	497122	TRAY, Oil pan	P/6 35-36
1.516	497109	ROD, Oil level indicator	P/8 35-36, P/6 35-36
1.519	497121	PIPE, Oil suction	P/6 35-36
1.565	498841	TUBE, Crankshaft rear bearing cap drain	P/8 36, P/6 36
1.565	498844	GASKET, Oil return pipe	P/8 36, P/6 36
1.652	498832	PUMP ASSY., Oil (Grooved gear) 3 spgs	P/8 36, P/6 36
1.653	495011	BODY, Oil pump	P/8 33-34-35-36, P/6 35-36
1.656	494931	SCREEN ASSY., Oil pan	P/8 33-34-35-36, P/6 35-36
1.658	495017	SHAFT, Oil pump driven gear	P/8 33-34-35-36, P/6 35-36
1.659	525093	GEAR, Oil pump driven	P/8 33-34-35-36, P/6 all
1.660	497108	COVER, Oil screen	P/8 35-36, P/6 35-36
1.709	497232	GEAR, Dist. and oil pump drive (at camshaft)	P/8 36, P/6 35-36
1.723	495021	COVER, Oil pump	P/8 33-34-35-36, P/6 35-36
1.729	1399637	PIPE, Oil guage to engine (cut 62" long)	P/8 36, P/6 36
1.760	498991	VENTILATOR INLET and OIL FILLER (except w/Triplex)	P/8 36, P/6 36
1.760	499327	VENTILATOR INLET and OIL FILLER (with Triplex)	P/8 36, P/6 36
1.762	498748	VENTILATOR, Crankcase outlet	P/8 36, P/6 36
1.779	498753	CLIP, Ventilator outlet pipe	P/6 36
1.803	1505451	GAUGE, Oil pressure	P/8 36, P/6 36
1.836	852890	FILTER, Oil (service package)	P/8 33-34-35-36, P/6 35-36
2.004	498128	PEDAL, Starter (L.H.D.)	P/6 35-36
2.008	498129	BRACKET, Starter pedal (L.H.D.)	P/6 35-36
2.020	499119	PAD, Starter pedal (L.H.D.)	P/6 36
2.034	498132	PIN, Starter pedal clevis (L.H.D.)	P/6 35-36
2.134	499323	LINK, Generator adjusting	P/8 35-36, P/6 35-36
2.136	495216	BRACKET, Generating monitoring	P/8 33-34-35-36, P/6 35-36
2.161	1858458	INDICATOR, Distributor adjusting	P/8 35-36, P/6 35-36
2.175	497561	SUPPORT, Distriutor wire to coil	P/6 35-36
2.188	01255	CYLINDER, Ignition lock (less tumblers & keys)	P/8 35-36, P/6 35-36
2.189	217276	LINE, Distributor to carb (cut 43-11/16" long)	P/6 36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
2.251	404438	CLAMP, Spark plug wire	P/6 35-36
2.251	497560	BRACKET, Spark plug wire clamp	P/6 35-36
2.275	1859427	SWITCH, Lighting (except L.H.D. export and R.H.D.)	P/8 36, P/6 36
2.375	1406	SWITCH, Instrument panel light	P/8 36, P/6 36
2.375	499108	PLATE, Light switch control finish	P/8 36, P/6 36
2.375	499135	KNOB ASSY., Lighting switch control (brown)	P/8 36, P/6 36 Deluxe
2.375	499308	KNOB ASSY., Lighting switch control (black)	P/6 36 Mstr
2.379	1861874	BLOCK, Fuse	P/8 36, P/6 36
2.426	857810	INDICATOR, Generator telltale	P/8 36, P/6 36
2.447	403936	SWITCH, Stop Light	P/8 35-36, P/6 35-36
2.459	1859899	SWITCH, Dimmer	P/8 36, P/6 36
2.550	498846	BRACKET, Headlamp support R.H.	P/8 36, P/6 36
2.550	498847	BRACKET, Headlamp support L.H.	P/8 36, P/6 36
2.550	499202	PLATE, Headlamp bracket ornament R.H.	P/8 36, P/6 36
2.550	499203	PLATE, Headlamp bracket ornament L.H.	P/8 36, P/6 36
2.662	918911	BRACKET, Tail Lamp mtg (L.H.)(Tour sedans)	P/8 36, P/6 36
2.662	918913	BRACKET, Tail lamp mtg. (R.H.)(Tour sedans w/dual lamps)	P/8 36, P/6 36
2.662	919610	BRACKET, Tail lamp (ex. Sedans - single lamp)	P/8 36, P/6 36
2.662	919612	BRACKET, Tail lamp (ex. Sedans - dual lamps)	P/8 36, P/6 36
2.668	918877	EMBLEM, Tail lamp	all 35-36 Tour Sedans
2.668	919813	EMBLEM, Tail lamp (ex. Tour sedans)	P/8 36, P/6 36
2.670	918879	HOLDER ASSY., Tail lamp license (Tour sedans)	all 35-36 Tour Sedans
2.670	919790	HOLDER ASSY., Tail lamp license (ex. Tour Sedans)	P/8 36, P/6 36
2.679	498815	PAD, Tail lamp (ex. Tour sedans)	P/8 36, P/6 36
2.680	918875	BODY ASSY., Tail lamp (Tour. sedans)	P/8 36, P/6 36
2.680	918883	BODY ASSY., Tail lamp (L.H.D. Tour Sedans)	P/8 36, P/6 36
2.680	919927	BODY ASSY., Tail lamp (L.H. ex Tour Sedans) (Black)	P/8 36, P/6 36
2.680	919928	BODY ASSY., Tail lamp (R.H. ex. Tour Sedans) (Black)	P/8 36, P/6 36
2.681	918699	DOOR ASSY., Tail lamp	P/8 35-36, P/6 35-36
2.682	918700	LENS, Tail lamp door (ruby, oval)	P/8 35-36, P/6 35-36
2.684	918701	GASKET, Tail lamp door	P/8 35-36, P/6 35-36
2.685	918710	GLASS, Tail lamp clear	P/8 36, P/6 36 Tour sedans
2.685	918711	GLASS, Tail lamp outlook (ruby, oval)	P/8 36, P/6 36 Tour. Sedans
2.685	919617	GLASS, Tail lamp top (clear) (ex. Tour sedans)	P/8 36, P/6 36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
2.704	498817	Shade, instrument light	P/8 36, P/6 36
2.725	911263	HEADLAMP ASSY., (L.H. black)	P/8 36, P/6 36
2.725	911264	HEADLAMP ASSY., (R.H. black)	P/8 36, P/6 36
2.726	911781	BODY, Headlamp (L.H. black)	P/8 36, P/6 36
2.726	919782	BODY, Headlamp (R.H. black)	P/8 36, P/6 36
2.727	918805	LENS, Headlamp L.H.	P/8 35-36, P/6 35-36
2.727	918805	LENS, Headlamp R.H.	P/8 35-36, P/6 35-36
2.728	918813	DOOR, Headlamp (L.H.) prime	P/8 35-36, P/6 35-36
2.728	918814	DOOR, Headlamp (R.H.) prime	P/8 35-36, P/6 35-36
2.731	918811	RING, Headlamp lens retaining	P/8 35-36, P/6 35-36
2.734	918970	REFLECTOR, Headlamp	P/8 36, P/6 36
2.735	918677	GASKET, Headlamp lens	P/8 35-36, P/6 35-36
2.810	1853745	VIBRATOR ASSY., Horn (Single Horn)	P/8 35-36, P/6 35-36
2.810	1858839	POWER ASSY., Horn (low note)	P/8 35-36, P/6 35-36
2.810	1858841	VIBRATOR ASSY., Horn power	P/8 35-36, P/6 35-36
2.811	1854090	PROJECTOR, Horn (Low note)	P/8 34-35-36, P/6 35-36
2.811	1854091	PROJECTOR, Horn (high note)	P/8 35-36, P/6 35-36
2.815	1843305	RELAY ASSY., Horn	P/8 35-36, P/6 35-36
2.815	498049	BRACKET, Horn Relay (Dual Horns)	P/8 35-36, P/6 35-36
2.817	496292	BUTTON, Horn	P/8 35-36, P/6 35-36
2.821	496421	RETAINER, Horn button	P/8 34-35-36, P/6 35-36
2.821	496422	RING, Horn button snap	P/8 34-35-36, P/6 35-36
2.822	496493	BASE, Horn button wire	P/8 34-35-36, P/6 35-36
2.823	497324	SPRING, Horn button contact	P/8 35-36, P/6 35-36
2.845	497573	BRACKET, Horn (with single horn)	P/8 35-36, P/6 35-36
2.845	497577	PLATE, Horn bracket (with single horn)	P/8 35-36, P/6 35-36
2.845	498045	BRACE, Horn bracket (with dual horn)	P/8 35-36, P/6 35-36
2.845	498046	BRACKET, Horn (with dual horn)	P/8 35-36, P/6 35-36
2.845	498050	CLAMP, Horn bracket (R.H.) (dual horns)	P/8 35-36, P/6 35-36
2.845	498051	CLAMP, Horn bracket (R.H.) (dual horns)	P/8 35-36, P/6 35-36
2.845	498055	PLATE, Horn bracket (with dual horn)	P/8 35-36, P/6 35-36
2.847	497575	BUSHING, Horn bracket (single horn)	P/8 35-36, P/6 35-36
2.847	497576	PAD, Horn bracket to dash (single horn)	P/8 35-36, P/6 35-36
2.847	498052	GROMMET, Horn projector (dual horns)	P/8 35-36, P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
2.847	498053	INSULATOR, Horn bracket (dual horns)	P/8 35-36, P/6 35-36
2.847	498054	INSULATOR, Horn bracket clamp (dual horns)	P/8 35-36, P/6 35-36
2.858	492767	RETAINER, Horn button wire	1931-36 all
2.859	1853836	WIRE, Horn button	P/8 34-35-36, P/6 35-36
2.859	1854710	WIRE, Horn ground (with dual horns)	P/8 34-35-36, P/6 35-36
3.0		Carburator, Carter 340S or 414S	P/6 36 & Taxi
3.001	498759	TANK, Fuel	P/8 36, P/6 36
3.003	498789	PIPE, Fuel tank filler	P/8 36, P/6 36
3.008	499118	GROMMET, Fuel tank filler pipe thru fender	P/8 36, P/6 36
3.009	498791	PIPE, Fuel tank vert.	P/8 36, P/6 36
3.010	498794	SUPPORT, Fuel tank filler pipe	P/8 36, P/6 36
3.028	498932	CAP, Fuel tank filler	P/8 36, P/6 36
3.112	962332	GASKET, Fuel outlet fitting to tank	P/8 35-36, P/6 31 to 36
3.140	498792	STRAP, Fuel tank (lower)	P/8 36, P/6 36
3.140	498793	STRAP, Fuel tank (upper)	P/8 36, P/6 36
3.231	1522221	PUMP, Fuel	P/8 36, P/6 36
3.265	498876	MANIFOLD, Intake (L.H.D.)	P/6 36
3.270	497160	GASKET, Intake and exhaust manifold (front)	P/6 35-36
3.270	497161	GASKET, Intake and exhaust (center)	P/6 35-36
3.270	497162	GASKET, Intake and exhaust (rear)	P/6 35-36
3.275	494520	STUD (3/8"X1-1'1/4") (manifold to block)	P/8 33-34-35-36, P/6 35-36
3.284	495468	GASKET, Carburetor	P/8 33-34-35-36, P/6 35-36
3.402	1525996	CLEANER and SILENCER, Carburetor Air	P/6 35-36
3.402	544322	AIR CLEANER & Crank case vent. package (dry & dusty)	1933 to 36 all
3.405	499142	BRACE, Air cleaner to engine	P/8 36 w/triplex, P/6 36
3.425	495480	TRUNNION, Throttle idler lever and cross bar	P/8 33-34-35-36, P/6 35-36
3.425	495483	TRUNNION, Throttle control rod (L.H.D.)	P/8 33-34-35-36, P/6 35-36
3.425	498712	TRUNNION, Throttle cracker rod	P/6 36
3.430	498145	ROD, Carburetor throttle (L.H.D.)	P/6 35-36
3.430	498711	ROD, Hand throttle cracker (LHD)	P/6 36
3.431	495471	ROD, Accelerator Pedal (LHD)	P/8 33-34-35-36, P/6 35-36
3.450	495402	PIN, Throttle idler lever (LHD)	P/6 35-36
3.450	499197	BAR ASSY., Throttle cross (LHD)	P/8 36
3.451	399623	PEDAL, Accelerator (LHD)	P/8 33-34-35-36, P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
3.480	498987	CONTROL ASSY., Throttle (brown) (LHD)	P/8 36, P/6 36 Deluxe
3.480	499109	PLATE, Throttle control finish	P/8 36, P/6 36
3.480	499309	CONTROL ASSY., Throttle (black)(LHD)	P/6 36 mstr.
3.483	494157	CLAMP, Instrument panel finish plate	P/8 35-36, P/6 35-36
3.524	497457	ROD, Accelerator Control (LHD)	P/6 35-36
3.569	497452	LEVER, Accelerator cross shaft L.H.	P/8 36, P/6 36
3.569	499183	LEVER, Accelerator cross shaft R.H.	P/8 36, P/6 36
3.571	498536	LEVER, Starter to throttle cable idler (LHD)	P/6 36
3.585	498146	SHAFT, Accelerator cross (LHD)	P/6 35-36
3.589	497450	BRACKET, Accel. cross shaft (L.H.) (LHD)	P/8 35-36, P/6 35-36
3.601	498510	MANIFOLD, Exhaust	P/6 36
3.602	497612	COVER, Exhaust manifold	P/8 35-36, P/6 36
3.604	497585	OUTLET ASSY., Exhaust manifold riser	P/8 35-36, P/6 35-36
3.605	496215	GASKET, Exhaust manifold outlet	P/8 34-35-36, P/6 35-36
3.609	497429	PIPE, Exhaust	P/6 35-36
3.610	495391	FLANGE, Exhaust pipe	P/8 33-34-35-36, P/6 35-36
3.640	495828	THERMOSTAT, Manifold heat control valve	P/8 33-34-35-36, P/6 35-36
3.641	496375	BUSHING, Manifold heat control valve	P/8 35-36, P/6 35-36
3.647	495380	VALVE ASSY., Manifold heat control (Partial)	P/8 33-34-35-36, P/6 35-36
3.647	498120	BRACKET, Heat control air tube to manifold	P/8 35-36, P/6 35-36
3.647	498126	VALVE ASSY., Manifold heat control	P/8 35-36, P/6 35-36
3.647	498135	TUBE, Manifold heat control air	P/6 35-36
3.649	495384	FLANGE ASSY., Manifold heat control valve	P/8 33-34-35-36, P/6 35-36
3.653	495508	SPRING, Manifold heat control valve	P/8 33-34-35-36, P/6 35-36
3.658	496436	GASKET, Manifold heat control valve	P/8 33-34-35-36, P/6 35-36
3.667	497158	COUNTERWEIGHT, Manifold heat control valve	P/8 35-36, P/6 35-36
3.680	495823	DEFLECTOR ASSY., Manifold valve thermostat	P/8 33-34-35-36, P/6 35-36
3.701	497338	MUFFLER	P/6 35-36
3.765	498687	PIPE, Muffler tail	P/8 36, P/6 36
3.766	498684	SUPPORT, Tail pipe rear	P/8 36, P/6 36
4.	#TS63832	Transmission Gasket Set	1936-38, all
4.006	1293309	LEVER ASSY., Gear Shift	all 36
4.009	374993	GRIP, Gear Shift Lever	P/8 35-36, P/6 35-36
4.026	553424	SPRING, Gear shift lever fulcrum	P/8 36, P/6 36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
4.026	553458	SPRING, Gear shift lever tension	P/8 36, P/6 36
4.026	555573	SPRING AND CUP, Gear shift lever	P/8 36, P/6 36
4.028	553457	SPACER, Gear shift lever fulcrum	P/8 36, P/6 36
4.035	498597	GASKET, Trans. to Clutch Housing	P/8 36, P/6 36
4.040	497382	COLLAR, Hand brake lever (LHD)	P/8 35-36, P/6 35-36
4.046	496580	LEVER ASSY., Hand brake	P/8 34-35-36, P/6 35-36
4.071	496581	SECTOR, Hand brake lever	P/8 34-35-36, P/6 35-36
4.103	103893	PLUG, Trans. shift rail hold (7/8")	P/8 36, P/6 36
4.103	1399802	CASE, Transmission	P/8 36, P/6 36
4.131	553461	GASKET, Transmission cover	P/8 32 to 36, P/6 32 to 36
4.303	553659	FORK, Gear shift 2nd and high	P/8 36, P/6 36
4.304	1290430	FORK, GEAR Shift low and reverse	P/8 36, P/6 36
4.309	1290429	SHAFT, Gear shift, low and reverse	P/8 36, P/6 36
4.309	553447	RAIL, Trans. 2nd & 3rd speed shift	P/8 32 to 36, P/6 32 to 36
4.311	104920	BALL, Steel (3/8") Trans. shift fork	P/8 32 to 36, P/6 32-35-36
4.317	1293575	RETAINER, Rear bearing	P/8 36, P/6 36
4.318	1280171	GASKET, Rear bearing retainer	P/8 36, P/6 36
4.333	553734	SLEEVE, Speed. driven gear shaft	P/8 36, P/6 36
4.337	498587	GEAR and SHAFT, Speed. driven (12-4) with 37-9 axle	P/8 36, P/6 36
4.337	498588	GEAR & SHAFT, Speed. driven (13-4) w 40-9 or 44-9 axle	P/8 36, P/6 36
4.337	498589	GEAR and SHAFT, Speed. driven (44-9 axle)	P/8 35-36, P/6 35-36
4.343	378614	GEAR, Speed. drive (13-4 or 14-4 ratio)	P/8 35-36, P/6 35-36
4.351	1293298	GEAR, transmission main drive	P/8 36, P/6 36
4.352	141848	BEARING, Trans. main shaft pilot	P/8 36, P/6 36
4.353	553578	SPACER, Trans. Pilot bearing	P/8 32 to 36, P/6 32 to 36
4.355	954144	BEARING, Transmission front	P/8 36, P/6 36
4.356	1293296	RETAINER, Main drive gear bearing	P/8 36, P/6 36
4.358	1289458	GASKET, Trans. front bearing retainer	P/8 36, P/6 36
4.395	1282453	GEAR, Main shaft second speed	P/8 36, P/6 36
4.396	1282461	SLEEVE, second and high sliding	P/8 36, P/6 36
4.397	1287260	RING, Main shaft snap (2nd speed sleeve)	P/8 36, P/6 36
4.398	1287261	WASHER, Second speed gear thrust	P/8 36, P/6 36
4.400	1291266	SPRING, Synchronizer drum	P/8 36, P/6 36
4.404	368261	WASHER, Main shaft rear (3/8")	P/8 33-34-35-36, P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
4.408	903206	BEARING, Transmission rear	P/8 36, P/6 36
4.412	1258832	RING, Trans. rear bearing snap	P/8 36, P/6 36
4.417	1283422	GEAR, Low and reverse sliding	P/8 36, P/6 36
4.421	1284364	GEAR ASSY., Trans. countershaft	P/8 36, P/6 36
4.422	553463	BUSHING, Countershaft gear (front)	P/8 36, P/6 36
4.422	553464	BUSING, Countershaft gear (rear)	P/8 36, P/6 36
4.430	1283878	GEAR, Transmission reverse idler	P/8 36, P/6 36
4.433	1284274	SHAFT, Reverse idler gear	P/8 36, P/6 36
4.503	551888	BEARING, Universal joint trunnion	P/8 33-34-35-36, P/6 35-36
4.523	373536	YOKE, Universal joint (rear)	P/8 33-34-35-36, P/6 35-36
4.523	378616	YOKE, Universal joint (front)	P/8 35-36, P/6 35-36
4.525	347658	RING, Universal joint front	P/8 33-34-35-36, P/6 35-36
4.525	359621	RING, Universal joint rear	P/8 33-34-35-36, P/6 35-36
4.530	373526	BALL, Universal joint	P/8 34-35-36, P/6 35-36
4.532	348131	COLLAR, Universal joint ball	P/8 33-34-35-36, P/6 35-36
4.534		Universal joint, complete	P/8 34-35-36, P/6 35-36
4.534	373528	RETAINER, Universal joint ball packing	P/8 34-35-36, P/6 35-36
4.626	497407	BUSHING, Brake pedal bracket (LHD)	P/8 35-36, P/6 35-36
4.630	497548	LEVER, Brake pedal (LHD)	P/8 35-36, P/6 35-36
4.632	497549	LEVER, Brake pedal spring (LHD)	P/8 35-36, P/6 35-36
4.650	544323	CYLINDER ASSY., Brake master (LHD)	P/8 36, P/6 36
4.656	231435	RING, Master cylinder lock	P/8 35-36, P/6 35-36
4.657	231450	VALVE ASSY., Master cylinder check	P/8 35-36, P/6 35-36
4.657	231454	WASHER, Master cylinder valve seat	P/8 35-36, P/6 35-36
4.658	103497	PIN, Master cylinder conn. rod clevis 7/16"	P/8 35-36, P/6 35-36
4.658	498799	CLEVIS, Master cylinder connecting rod	P/8 36, P/6 36
4.658	5300861	ROD AND STOP, Master cylinder push	P/8 36, P/6 36
4.659	5300850	BOOT, Master cylinder	P/8 36, P/6 36
4.660	231446	STRAP, Master cylinder end boot (large)	P/8 35-36, P/6 35-36
4.665	1074875	CYLINDER ASSYL, Rear wheel brake R.H. (15/16" bore)	P/8 35-36, P/6 35-36
4.665	1074875	CYLINDER ASSYL, Front wheel brake R.H. (15/16" bore)	P/6 36 mstr
4.665	1074876	CYLINDER ASSYL, Front wheel brake L.H. (15/16" bore)	P/6 36 mstr
4.665	1074876	CYLINDER ASSYL, Rear wheel brake L.H. (15/16" bore)	P/8 35-36, P/6 35-36
4.665	1074917	CYLINDER ASSYL, Front wheel brake R.H. (1" bore)	P/8 35-36, P/6 35-36 deluxe

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
4.665	1074918	CYLINDER ASSYL, Front wheel brake L.H. (1" bore)	P/8 35-36, P/6 35-36 deluxe
4.779	499052	CABLE ASSY., Rear brake	P/8 35-36, P/6 35-36
4.786	499055	ANCHOR, Brake cable to brake	P/8 36, P/6 36
4.786	499074	ANCHOR, Hand brake cable frame (R.H.)	P/8 36, P/6 36
4.786	499075	ANCHOR, Hand brake cable frame (L.H.)	P/8 36, P/6 36
4.786	499076	CLAMP, Hand brake cable anchor R.H.	P/8 36, P/6 36
4.786	499077	CLAMP, Hand brake cable anchor L.H.	P/8 36, P/6 36
4.826	498706	ROD, Hand brake (LHD)	P/8 36, P/6 36
4.826	499052	CABLE ASSY., Rear brake	all 36
5.006	601251	CARRIER and TORQUE TUBE, Differential	P/8 36, P/6 36
5.103	378147	SHAFT, Propeller	P/8 35-36, P/6 35-36
5.107	377722	RING, Pinion brg. lock (rear) (ex. 44-9 axle)	P/8 35-36, P/6 35-36
5.107	379516	RING, Pinion brg. lock (rear) w/44-9 axle)	P/8 35-36, P/6 35-36
5.109	905206	BEARING, Differential pinion (front)	P/8 33-34-35-36, P/6 35-36
5.110	373328	BUSHING, Torque tube (front)	P/8 33-34-35-36, P/6 35-36
5.110	376021	BUSHING ASSY., Torque tube (rear axle #652952 up)	P/8 34-35-36, P/6 35-36
5.111	347813	PIN, Torque tube bushing dowel	P/8 33-34-35-36, P/6 35-36
5.113	374633	SLEEVE, Pinion bearing lock	P/8 33-34-35-36, P/6 35-36
5.124	376023	RETAINER, Pinion shaft packing (rear axle #652952 up)	P/8 34-35-36, P/6 35-36
5.134	125630	BEARING, Diff. pinion (ex. 44-9 axle) (rear)	P/8 36, P/6 36
5.134	379515	BEARING, Differential pinion (rear)	35-36 with 44-9 axles
5.213	544325	HOUSING and BRAKE SUPPORT ASSY., Rear axle	P/8 36, P/6 36 square flange
5.213	601356	HOUSING and BRAKE SUPPORT ASSY., Rear axle	P/8 35-36, P/6 35-36 (round
5.223	372291	COVER, Rear axle housing	P/8 33-34-35-36, P/6 35-36
5.224	370245	GASKET, Rear axle housing cover	P/8 33-34-35-36, P/6 35-36
5.225	378288	DEFLECTOR, Rear axle housing oil	P/8 35-36, P/6 35-36
5.227	344829	PLUG, Rear axle housing filler	P/8 33-34-35-36, P/6 35-36
5.315	497291	RETAINER, Rear spring bumper	P/8 35-36, P/6 35-36
5.316	495037	BUMPER, Spring (front or rear)	P/8 33-34-35-36, P/6 35-36
5.333	497843	SUPPORT ASSY., Rear brake R.H.	P/8 35, P/6 35-36 ex. 37-9
5.333	497844	SUPPORT ASSY., Rear brake L.H.	P/8 35, P/6 35-36 ex. 37-9
5.333	499102	SUPPORT ASSY., Rear brake R.H.	all 36 (w/37-9 & 44-9 axles)
5.333	499103	SUPPORT ASSY., Rear brake L.H.	all 36 (w/37-9 & 44-9 axles)
5.403	601221	SEAT AND CAP, Rear spring	P/8 35-36, P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
5.420	379405	SHAFT, Rear axle (LH)	P/8 35-36, P/6 35-36
5.420	379406	SHAFT, Rear axle (RH)	P/8 35-36, P/6 35-36
5.422	370240	LOCK, Axle shaft	P/8 33-34-35-36, P/6 35-36
5.476	497813	LEVER, Rear brake operating (RH)	P/8 35-36, P/6 35-36
5.476	497814	LEVER, Rear brake operating (LH)	P/8 35-36, P/6 35-36
5.476	497865	LEVER, Hand brake equalizer	P/8 35-36, P/6 35-36
5.476	497867	LINK, Hand brake equalizer lever	P/8 35-36, P/6 35-36
5.476	498948	LEVER, Hand brake equalizer	P/8 36, P/6 36
5.510		GASKET, Differential case	P/8 34-35-36, P/6 35-36
5.510	364538	CASE, Differential	P/8 34-35-36, P/6 35-36
5.517	369964	PIN, Differential pinion cross	P/8 33-34-35-36, P/6 35-36
5.523	370217	SPACER, Axle shaft (Std)	P/8 33-34-35-36, P/6 35-36
5.523	372515	SPACER, Axle shaft (oversize)	P/8 33-34-35-36, P/6 35-36
5.526	370225	GEAR, Differential pinion	P/8 33-34-35-36, P/6 35-36
5.528	370224	GEAR, Differential side	P/8 33-34-35-36, P/6 35-36
5.529	544259	RING GEAR and PINION SET (40-9) w/hyatt brg.	P/6 36
5.529	544266	RING GEAR and PINION SET, (40-9) w/hyatt brg.	P/8 36
5.536	902100	BEARING, Differential side	P/8 33-34-35-36, P/6 35-36
5.539	344052	LOCK, Differential side brg adj. nut	P/8 33-34-35-36, P/6 35-36
5.546	372005	PIN, Pinion shaft coupling	P/8 33-34-35-36, P/6 35-36
5.548	378617	JOINT ASSY., Universal	P/8 35-36, P/6 35-36
5.566	351888	BEARING, Universal joint	P/8 33-34-35-36, P/6 35-36
5.803	499257	WHEEL, Steel spoke (primed)	P/8 36, P/6 36
5.809	498922	DRUM, Rear brake	P/8 36, P/6 36
5.815	369978	OIL SEAL, Rear axle shaft	P/8 33-34-35-36, P/6 35-36
5.816	370251	RETAINER, Axle shaft bearing inner	P/8 33-34-35-36, P/6 35-36
5.819	365673	GASKET, Front and rear brake drum oil deflector	P/8 34-35-36, P/6 35-36
5.819	375693	GASKET, Rear brake drum	P/8 33-34-35-36, P/6 35-36
5.819	498337	GASKET, Rear brake drum spacing (heavy)	P/8 35-36, P/6 35-36
5.842	498540	WRENCH, Hub bolt and jack handle	P/8 35-36, P/6 35-36
5.855	111121	ROLLERS & OUTER RACE, Rear wheel brg.	P/8 33-34-35-36, P/6 35-36
5.855	111122	RACE, Rear wheel brg. (inner)	P/8 33-34-35-36, P/6 35-36
5.860	499101	CAP, Wheel outer hub	P/8 36, P/6 36
6.008	379599	I BEAM, Front axle	P/6 35-36, Mstr

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
6.009	472635	STOP, Steering knuckle	P/6 35-36, Mstr
6.020	362094	KNUCKLE, Steering	P/6 35-36, Mstr
6.021	352210	BUSHING, Steering knuckle	P/6 35-36, Mstr
6.022	124549	KEY, Steering knuckle (3/16"x3/4")	P/6 35-36, Mstr
6.031	498111	SUPPORT ASSY., Front brake (RH)	P/6 35-36, Mstr
6.031	498112	SUPPORT ASSY., Front brake (LH)	P/6 35-36, Mstr
6.037	498175	DEFLECTOR, Front brake drum oil	P/6 35-36, Mstr
6.103	373541	ARM, Steering (LHD)	P/6 35-36, Mstr
6.103	498773	ARM, Steering third (LHD)	P/6 36, Mstr
6.111	495351	COVER, Tie rod dust	P/8 34-35-36, P/6 35-36
6.203	363305	KING PIN and LOCK UNIT	P/6 35-36, Mstr
6.210	352569	BEARING, King pin thrust	P/6 35-36, Mstr
6.216	366704	PIN, King pin lock	P/6 35-36, Mstr
6.223	352216	PLUG, Steering knuckle expansion	P/6 35-36, Mstr
6.230	367528	ROD, Front wheel tie	P/6 35-36, Mstr
6.233	374226	END, Front wheel tie rod (RH)	P/8 34-35-36, P/6 35-36
6.233	374227	END, Front wheel tie rod (LH)	P/8 34-35-36, P/6 35-36
6.241	335977	PLUG, Front wheel tie rod end	P/8 33-34-35-36, P/6 35-36
6.241	357577	SEAT, Front wheel tie rod ball	P/8 34-35-36, P/6 35-36
6.306	498926	HUB and DRUM, Front wheel brake RH	P/6 36 Mstr
6.306	498927	HUB and DRUM, Front wheel brake LH	P/6 36 Mstr
6.314	909502	CONE, Front wheel brg. (inner)	P/8 34-35-36, P/6 all
6.315	909501	CONE, Front wheel brg. (outer)	P/8 34-35-36, P/6 all
6.316	909602	CUP, Front wheel brg. (inner)	P/8 34-35-36, P/6 all
6.317	909601	CUP, Front wheel brg (outer)	P/8 34-35-36, P/6 all
6.318	909702	BALLS & SEPARATOR, Frt wheel brg (inner)	P/8 34-35-36, P/6 all
6.319	909701	BALLS & SEPARATOR, Front wheel brg. (outer)	P/8 34-35-36, P/6 all
6.323	352330	DEFLECTOR, Front hub oil (inner)	P/8 34-35-36, P/6 all
6.513	261251	WHEEL, Steering	P/8 36, P/6 36
6.518	262596	HOUSING ASSY., Steering column	P/8 35-36, P/6 35-36
6.520	262172	RETAINER, Steering shaft bearing (upper)	P/8 34-35-36, P/6 35-36
6.521	104916	BALL, Steel (3/16") steer. shaft brg. (upper)	P/8 34-35-36, P/6 35-36
6.521	262159	BEARING ASSY., Steering shaft (upper)	P/8 34-35-36, P/6 35-36
6.524	262608	SHAFT & WORM, Steering (LHD)	P/8 35-36, P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
6.526	262160	SPRING, Steering shaft brg (upper)	P/8 34-35-36, P/6 35-36
6.526	262468	SEAT, Steering shaft bearing spring	P/8 34-35-36, P/6 35-36
6.527	259782	RACE, Steering gear worm thrust brg	P/8 34-35-36, P/6 35-36
6.530	261866	BEARING, Steering gear thrust	P/8 34-35-36, P/6 35-36
6.553	261525	TUBE, Steering gear grease retaining	P/8 34-35-36, P/6 35-36
6.785	262598	HOUSING, Pitman shaft (LHD)	P/8 35-36, P/6 35-36
6.786	259578	BUSHING, Pitman arm shaft	P/8 34-35-36, P/6 35-36
6.803	262289	HOUSING, Steering gear (LHD)	P/8 34-35-36, P/6 35-36
6.805	261883	GASKET, Steering gear housing	P/8 34-35-36, P/6 35-36
6.850	262602	ROLLER & SHAFT, Steering gear (LHD)	P/8 35-36, P/6 35-36
6.855	259486	CORK, Steering gear grease retaining	P/8 35-36, P/6 35-36
6.859	498771	ARM, Pitman	P/6 Mstr
6.870	498778	ROD & PLUGS, Steering connecting (LHD)	P/6 36 Mstr
6.874	357577	SEAT, Steering connecting rod ball	P/6 36 Mstr
6.876	335976	SPRING, Steering connecting rod	P/8 34-35-36, P/6 35-36
7.227	497445	BRACKET, Engine rear support frame	P/8 35-36, P/6 35-36
7.237	498903	BRACKET ASSY., Clutch pedal frame	all 36
7.413	495063	BUSHING, Rear spring rear	P/8 34-35-36, P/6 35-36
7.413	495063	BUSHING, Front spring rear	P/6 35-36 mstr. frnt.
7.413	751005	BUSHING, Front spring (rear)	P/6 35-36 Mstr
7.427	498442	PIN & BUSHING, Spring shackle	P/8 34-35-36, P/6 35-36
7.436	495034	SHACKLE, Front spring	P/6 35-36 Mstr.
7.495	544260	COVER PACKAGE, Front spring (sedans)	P/8 35-36, P/6 35-36
7.495	544261	COVER PACKAGE, Rear spring (coupes)	P/8 35-36, P/6 35-36
7.503	498013	SPRING & COVER, Rear (8 leaves)	P/8 35-36, P/6 35-36 sedans
7.503	498323	SPRING & COVERS, Rear (7 leaves)	P/8 35-36, P/6 35-36
7.523	495035	SHACKLE, Rear spring	P/8 35-36, P/6 35-36 inner
7.523	498439	SHACKLE, Rear spring R.H.	P/8 35-36, P/6 35-36
7.523	498440	SHACKLE, Rear spring L.H.	P/8 35-36, P/6 35-36
7.629	498025	CLAMP, Rear tire carrier coupes	P/8 35-36, P/6 35-36
7.629	498284	CLAMP, Rear tire carrier (sedans & special coupe)	P/8 35-36, P/6 35-36
7.796	497462	SUPPORT, Front license	P/8 35-36, P/6 35-36
7.831	497467	BAR, Front bumper front (chrome)	all 36
7.831	498659	BAR, Rear bumper rear (chrome)	P/8 36, P/6 36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
7.836	498655	BAR ASSY., Rear bumper to frame	all 36
7.845	497470	BRACKET, Frt license support and bumper bar	P/8 35-36, P/6 35-36
7.845	497529	BAR ASSY., frt bumper to frame (LH)	P/8 35-36, P/6 35-36
7.845	497530	BAR ASSY., Front bumper to frame (LH)	P/8 35-36, P/6 35-36
8.000	498647	PANEL, Hood upper (RH)	P/6 36
8.000	498648	PANEL, Hood upper (LH)	P/6 36
8.001	498782	PANEL, Hood side (RH)	P/6 36
8.001	498783	PANEL, Hood side (LH)	P/6 36
8.003	498611	PANEL, Hood center	P/6 36
8.003	546335	HOOD ASSY.	P/6 36
8.007	497424	BRACKET, Hood catch radiator (RH)	P/8 35-36, P/6 35-36
8.007	497425	BRACKET, Hood catch radiator(LH)	P/8 35-36, P/6 35-36
8.015	496125	ROD, Hood hinge top (cut off 9-11/16")	P/6 36
8.015	497132	ROD, Hood hinge side	P/6 35-36
8.020	498713	PAD, Hood rear corner	P/6 36
8.028	497442	CATCH, Hood (RH)	P/6 35-36
8.028	497443	CATCH, Hood (LH)	P/6 35-36
8.049	498766	GRILLE, Hood side (RH)	P/6 36
8.049	498767	GRILLE, Hood side (LH)	P/6 36
8.049	498906	GUIDE, Hood grille	all 36
8.112	498117	PAN, Engine side (RH)	P/6 35-36 Mstr
8.112	498118	PAN, Engine side (LH)	P/6 35-36 Mstr.
8.125	499134	APRON, Radiator splash	all 36
8.130	499163	FENDER, Front, RH (LHD)	P/6 36 with 5 wheels
8.130	499164	FENDER, Front, LH (LHD)	P/6 36 with 5 wheels
8.130	499239	FENDER, Front R.H. (LHD)	P/6 36 with 6 wheels
8.130	499240	FENDER, Front L.H. (LHD)	P/6 36 with 6 wheels
8.131	498142	WELL, Front fender (LH)	P/6 35-36
8.131	498143	WELL, Front fender (L.H.)	P/6 35-36
8.137	497568	COVER, Front fender valve recess	P/6 35-36
8.141	498637	SUPPORT, Front fender outer R.H.	all 36
8.141	498638	SUPPORT, Front fender outer L.H.	all 36
8.142	497133	SUPPORT, Front fender (center)	P/8 35-36, P/6 35-36
8.144	498182	BRKT, Side wheel carrier well to frame (RH)	P/6 35-36

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
8.144	498183	BRKT, Side wheel carrier well to frame (LH)	P/6 35-36
8.153	499227	SKIRT, Front fender RH (LHD)	P/6 36
8.153	499230	SKIRT, Front fender LH (LHD)	P/6 36
8.160	498660	PANEL, Frt. fender to body filler (RH)	P/6 36
8.160	498661	PANEL, Frt. fender to body filler (LH)	P/6 36
8.203	498666	FENDER, Rear LH	all 36
8.203	499235	FENDER, Rear RH	all 36
8.212	497405	PAD, Tail lamp	P/8 34-36, P/6 35-36
8.212	498815	PAD, Tail lamp (ex. tour sedans)	all 36
8.212	498816	REINFORCEMENT, Tail lamp fender	all 36
8.217	498668	APRON, Rear fender RH	all 36
8.217	498669	APRON, Rear fender LH	all 36
8.223	498116	APRON & INSULATOR, Rear splash, (black)	P/8 35-36, P/6 35-36
8.299	498643	BOARD ASSY., Running (R.H.)	P/6 36
8.299	498644	BOARD ASSY., Running (L.H.)	P/6 36
8.820	498539	JACK, Wheel (for wrench type handle)	all 36
8.821	496698	KIT, tool	P/8 32 to 36, P/6 35-36
8.830	498214	PLATE, Side tire cover (w/ 16x6.00 tire) black	P/6 35-36
8.844	498392	RING, Side tire cover (RH) (w/16x6.00 tire)	P/6 35-36
8.844	498393	RING, Side tire cover, (LH) (w/16x6.00 tire)	P/6 35-36
9.466	497957	BRACKET, Rear bumper step (LHD)	all 35-36 sport & conv.
9.466	498141	PLATE, Rear bumper step (LHD)	all 35-36 sport & conv.
9.467	497959	STEP, Rear bumper	all 35-36 sport & conv.
9.468	496512	STEP, Rear fender	all 35-36 sport & conv.
9.650	499370	RADIO PACKAGE, Dash control conversion (for '35 radios)	all 36
9.714	601496	BRACKET, Mirror watch	1935-36
9.740	1561850	PLATE, Inst panel mounting	all 36
9.741	499110	PLATE, Inst panel upper finish (radio opening)	all 36
9.852	498260	BRACE, Side wheel carrier to body (RH) black	P/5 36-36
9.852	498261	BRACE, Side wheel carrier to body (LH) black	P/6 35-36
9.856	499048	STAY ROD & BRACKET, Side wheel carrer (RH)	P/6 36
9.856	499049	STAY ROD & BRACKET, Side wheel carreir (LH)	P/6 36
9.859	496440	RETAINER, Spare side wheel	P/8 34, P/6 35-36
10.053	4065698	Molding, windshield division (inner)	

<u>Group #</u>	<u>Part Number</u>	<u>Part Name</u>	<u>Models</u>
10.053	4065843	Molding, windshield division (outer)	
10.092	4064618	Molding Assembly (w/weatherstrip)	Convertible
10.146	375821	BLADE, Windshield cleaner	all 35-36
10.147	378506	ARM, Windshield cleaner	all 35-36
10.150	4065673	MOTOR, Windshield cleaner	1936 all
10.151	4058841	NUT, Windshield cleaner motor	1936 all
10.159	4058847	Transmission, Windshield wiper	
10.185	4064618	Mirror Assembly	All (except coupes)
10.185	4065464	MIRROR ASSY, REAR VIEW	1936 (except coupes)
10.185	4065466	MIRROR ASSY. REAR VIEW	1936 Coupes
10.233	4045078	PLATE, Body name	1934-35-36 all
10.450	4064462	HINGE ASSY, FRONT DOOR, upper right	all 36
10.534	4058992	Door handle, plain	
10.650	4064678-79	Vent window assembly	convertible
10.652	4065869	Vent window weatherstrip, right	Convertible
10.652	4065870	Vent window weatherstrip, left	Convertible
10.681	4064745	Front door window	Convertible
10.797	4060809	Handle, door window	master
13.346	4067899	Top Assembly	Convertible
14.108	4069534	Rail assembly, top front roof	Convertible
14.221	4066815	Roof side rail, RH	convertible
14.221	4066816	Roof side rail, LH	convertible